
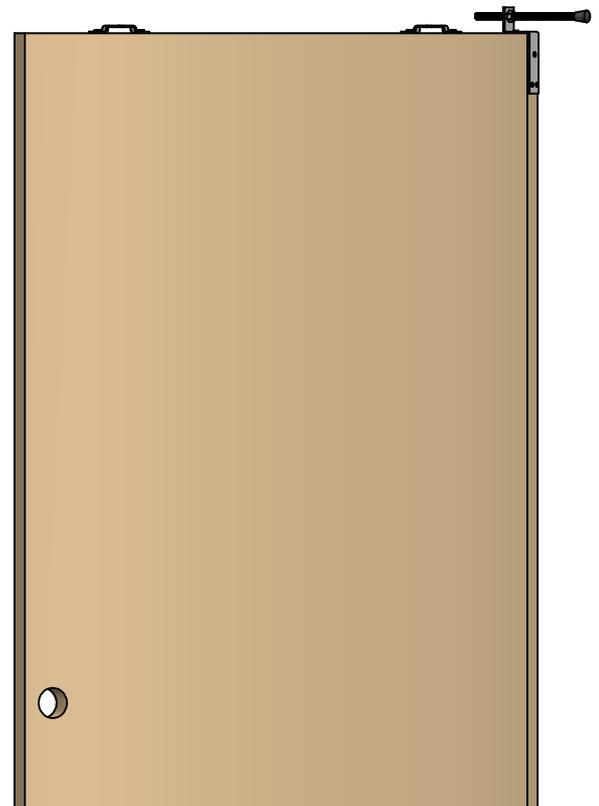
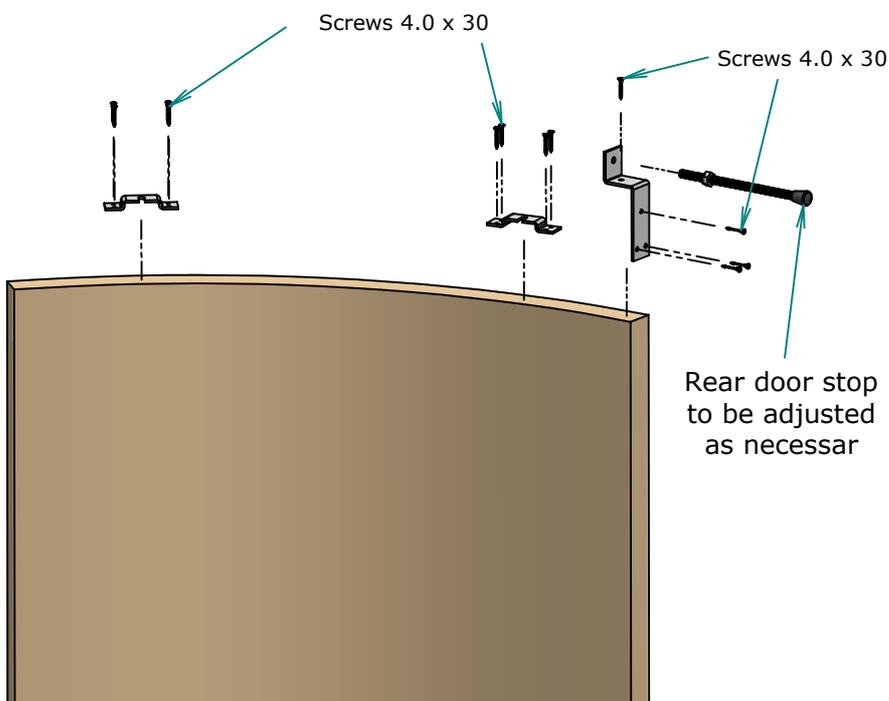



INSTALLING THE CURVED DOOR

603008200

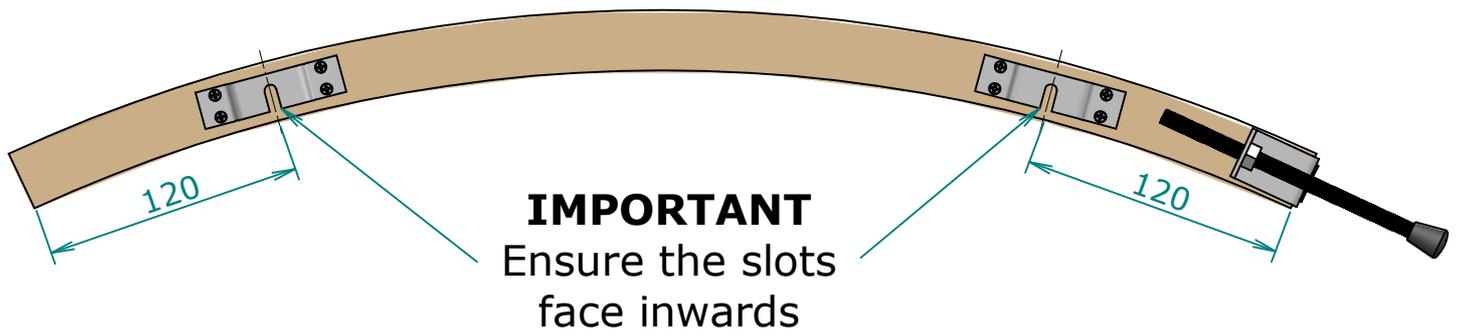


NOTE: before fitting the door brackets check and ensure the top face is perfectly at right angles to the vertical door axis

Install the door guide at floor level at the entrance to the pocket as shown

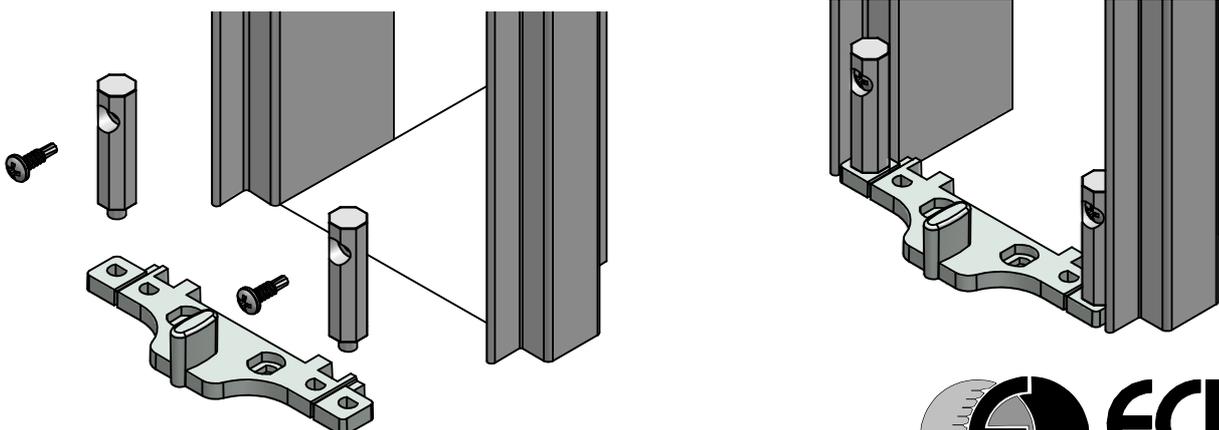


INSTALLING THE CURVED DOOR


Insert the runners in the track as shown

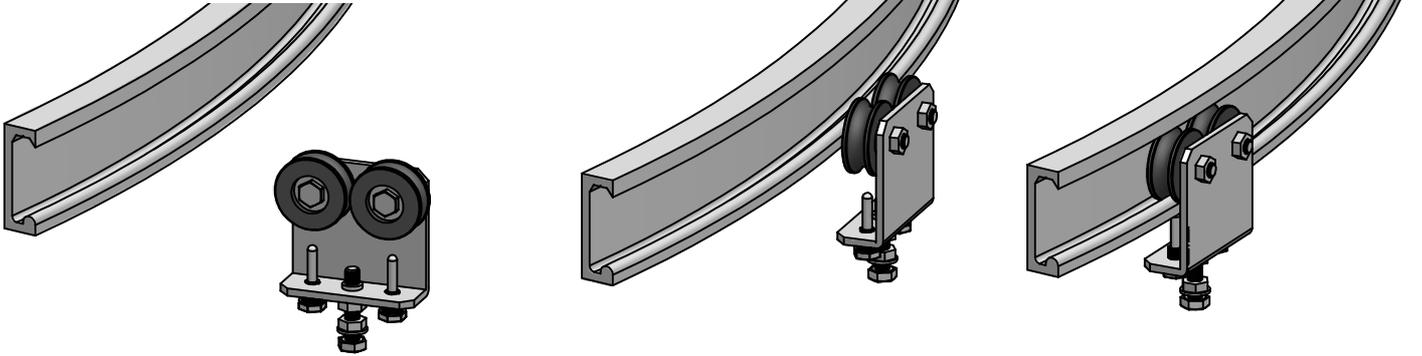

Close the screws indicated until almost touching the rail

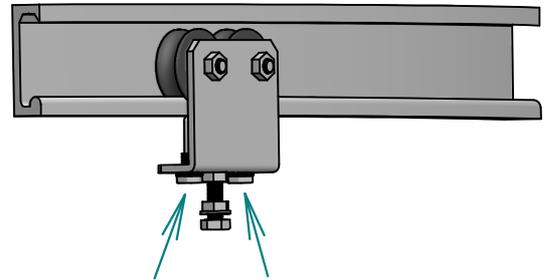

Hang the door to the runners using the door brackets

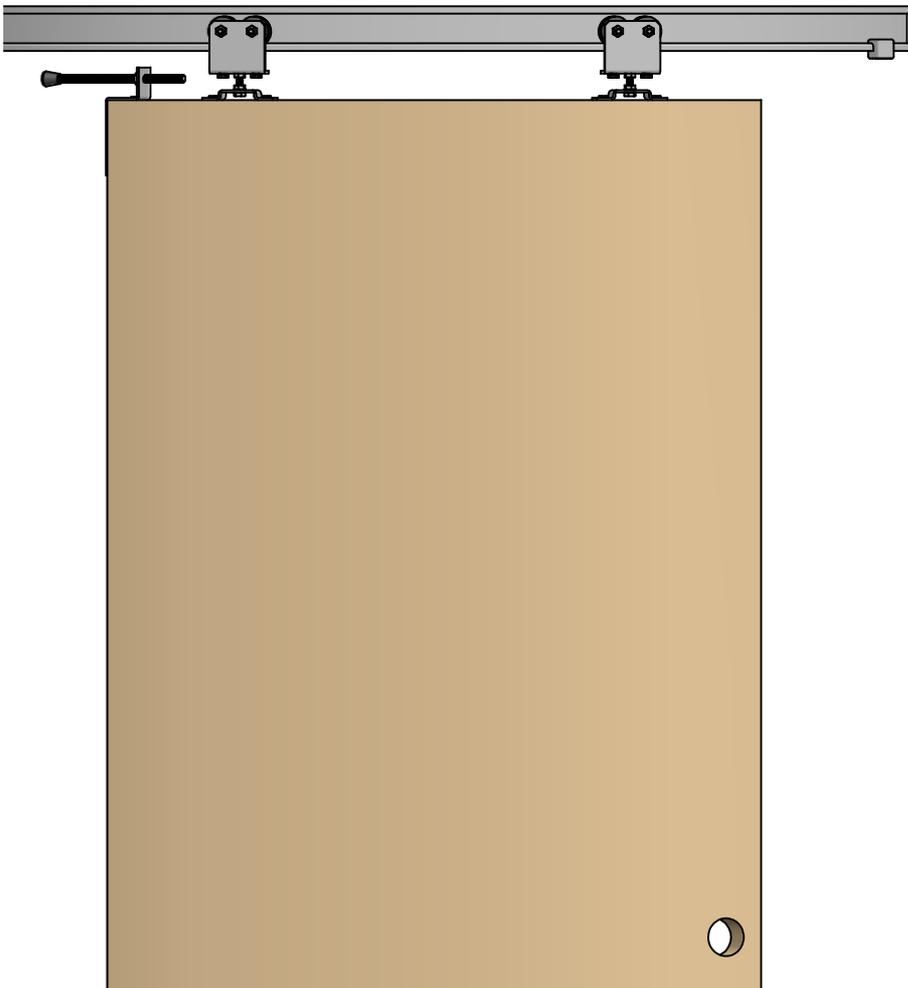

Insert the door stop at the door post end of the track, adjust for closing and lock into position

